

## > iCMP Device Setup

	iPad 🗢	s in your store	<b>G</b> ∂	13:37	New	Open	100 % m++ Closed					
•	Custom Item Calamari Arenos \$10.00 Bruschetta Apenos \$9.00	Meatballs APP102 Salted Cod Dip APP103 S8.00 Cheese Plate APP110 S11.00	Spinach and Cream Dip Artichoke and Olive Crostin Artichoke and Olive Crostin Charouterie ArP111 \$6.00	Warm Marinated Olives APP104 \$10.00 Mushroom Crostini APP108 \$7.00 Beet and Goat Cheese Salad SLD104 \$6.00	<ul> <li>Liliana B.</li> <li>Katheryn Fitzsi</li> <li>Term(s)</li> <li>Mushroor no salt</li> <li>Cheese P Large</li> <li>Ham and avacado no toma</li> <li>Grilled Sa Green S</li> </ul>	Crear # UFB87 A4 n Crostini fate Cheese Panini to Imon de Salad	Apr. 23, 2015 12:15 pm           23           Dime In           33         \$6.00           (\$2,00)           \$4,00           -           \$6.00           \$6.00           -	0		inge 2013 IDUNT : Insert ye	enico BLUETOOT 19873 \$43.1 Suur card	H 91 - 61 96
	Kale, Raisin and Apple Salad SLD105 \$8.00	Organic Asian Pear Salad SLD106 \$7.00	Green Salad SLD107 \$ <b>7.00</b>	Caprese SLD108 \$12.00	<ul> <li>Napoli</li> <li>Stella Arto</li> </ul>	ois	\$14.95 \$8.00		F1 1 oz		∾P	F4
	Appetize	• Main Entro	ee Soups	Salads	Pay	\$4	3.96		4 8 7 PRS +	റ ദ്യ ട്വ	60 ∭ 90 ₩¥	× < 0

#### Thank you for choosing talech and the Ingenico iCMP device.

This guide shows you how to set up, pair and configure your iCMP device and begin taking payments right away. If you have any questions, you can contact talech support at support@talech.com or 888.995.1998.

### Powering Up

#### Enable Bluetooth™ on your iPad

Tap on the Settings app on your iPad, select Bluetooth from the left menu and turn the Bluetooth setting ON.

#### Power on the iCMP

The power button is located above the USB charging port on the right side of the device.

Before pairing your iCMP with the iPad, make sure you charge your iCMP device for a minimum of 3 hours. A full charge takes about 6 hours.





Micro USB charging port is located on the right side of the iCMP device, below the power button Pairing the iCMP with your iPad



## **Pairing your Device**

#### Select iOS Pairing Mode

When BT Pairing Required appears on the screen, select "Begin".



# <sup>2</sup> **Pairing your Device** (continued)

#### Select your iPad

Use the **green key** to select your iPad from the list.



#### Find your iPad

Use the F2 and F3 keys to find your iPad in the list of devices available for pairing.



#### Get your pairing PIN

The iCMP Bluetooth device name and pairing PIN should be displayed on the screen.



# iCMP Configuration

Pairing the iCMP with your iPad

_
_

## Pairing your Device (continued)

#### iPad Settings

Select the iCMP device from the Bluetooth device list on your iPad.

Bluetooth	
DEVICES	
Joy's Mac	Connected (i)
PostMate - 36405573	Not Connected (i)
Socket CHS	Not Connected (i)
ICMP - 201333212	Connected (i)
Now Discoverable	

Your iCMP device should be paired with your iPad

#### **Pairing PIN**

Enter the pairing PIN on your iPad.

# T::to AM Enter PIN Cancel Cordless Phone Pand

Pairing your Device (continued)

#### talech Settings

Select the Ingenico iCMP reader from the card swiper setting screen in the talech app.

		5:37 PM	🕴 Not Charging 📖			
Ξ	< Back	Card Swiper Type				
	MagTek - iDynamo					
MagTek - uDynamo (Audio Jack Connecter)						
	ingenico - iCMP		× .			
5						

#### talech Payment Process

Tap Pay and you should see a prompt to swipe or tap to pay using the iCMP reader.

$\otimes$		Amount Du	ue: \$260.00			
		Split payment				
Credit	Cash	EL Check	Gift Card	tite Store Credit	Other	
	total		:	\$260.00		
Swipe or Tap to pay using the iCMP reader						
Payment Complete						
					-	

Unpairing the iCMP with your iPad

+

## Unpairing the iCMP

#### iPad Unpairing

Go to Bluetooth under settings, Tap the info icon on the far right (circle with an i) next to the Ingenico device. Tap Forget This Device then OK on the confirmation screen.

Bluetooth	
Joy's Mac	Connected (j)
PostMate - 36405573	Not Connected (i)
Socket CHS	Not Connected (i)
ICMP - 201333212	Connected (i)
Now Discoverable	

ingenico						
iī	nge	nic	0			
F1		-∕_ F3	F4			
1	2	3	E 🔶			
4	5	6	×			
7	8	9	<			
+	0	#	0			

#### iCMP Unpairing

With the iCMP reader powered on, press the black "F" key four times in quick succession. Your iCMP should be unpaired with your iPad.

#### Using Apple Pay™



#### To pay using a default card:

Hold iPhone within an inch of the contactless reader with finger held on Touch ID without pressing it. Wait for slight vibration, a check mark on screen and a beep for confirmation of payment. Wait for payment to be approved and continue with closing the transaction.

#### To pay using a different card:

Hold iPhone near the contactless reader without placing finger on Touch ID. iPhone will wake up, and you will see your default card on screen. Tap default card. From the list of cards, tap the one to you want to use. Place finger on Touch ID and move iPhone near the reader to complete the payment.

**É** Pay | Apple Pay is a registered trademark in the United States and other countries